



Spellex PocketMed™ Handheld Spell Checker

Medical, Pharmaceutical, and English Spell Checking Wizard!


Operation Manual

Thank you for purchasing Spellex PocketMed. Please read the Operation Manual carefully before using this unit.

In addition to the spell checking capability, this unit includes a:

- **Data Bank** to store names and phone numbers!
- **Scheduler** to set alarms for meetings, reminders, and more!
- **Calculator** with on-the-go assistance!
- **World Clock** to check the time around the world!
- **Protective Cover** to help protect against wear and tear!
- **Many** other features important to your everyday needs!

Handheld Layout and Functions:

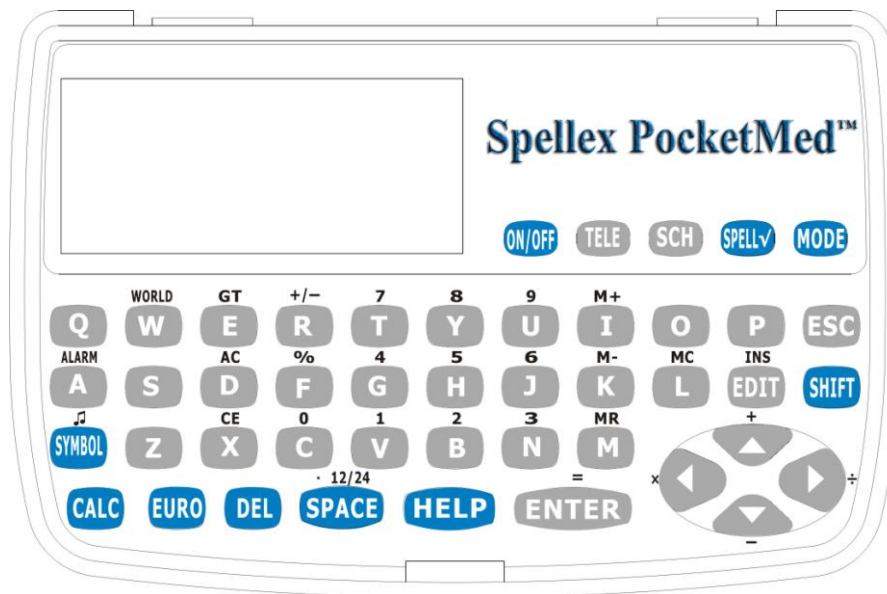

ON/OFF Turns Unit On or Off

TELE Selects the Data Bank Mode

SCH Selects the Scheduler Mode

SPELL✓ Selects Spell Checking Mode

MODE Changes between Modes

ESC Exits out of Mode / Cancels actions

EDIT Allows for New Entries / Edits Records

SHIFT Selects Upper Case, Lower Case, or Numbers

SYMBOL Turns Beep On/Off, Use for Punctuation while in Text Screens

CALC Selects Calculator Mode

EURO Selects Euro Currency Converter

DEL Deletes Characters or Digits / Deletes Records

SPACE Enters a Single Blank Space

HELP Displays Help Messages

ENTER Activates Spell Checking Process / Saves Records

W Shows time in Cities across the World

SHIFT Use for Capitalization and Numbers

Directional Pad (Arrows) are used for scrolling through words longer than the LCD display / Scroll through Names in Data Bank

Getting Started:

Power the unit on by pressing the “ON/OFF” button.

Set Date/Time:

1. When in the time display status, press the “EDIT” button to modify the date and time. The Year will start flashing, press the “←” or “→” buttons to change the setting. The cycle is the following:

Set Year → Set Month → Set Date → Set Hour → Set Minute → Set Second


2. If any of the settings are selected they will flash, press the “↑” or “↓” buttons to adjust. Press the “ENTER” button to save the current setting and return to time display status. (Press the “ESC” button to cancel setting change and return to time display mode.)

3. When in the time display status, press the “W” button to enter world time mode. Press “↑” or “↓” to see the time of different cities. Press the “→” button to see the date of the cities. Press the “ENTER” button to set the time of the specific city as the local time.

4. When in time display mode, press the “SPACE” button to switch between 12-hour/24-hour formats.

Set Alarm Time (Set up to two Alarms):

1. When in time display status, press the “A” button to set an alarm. Press the “EDIT” button, then press the “←” Or “→” buttons to select the option (the selected option will be flashing), press the “↑” or “↓” buttons to adjust and modify the alarm setting. Press the “ENTER” button to save the setting and return to time display status. Press the “ESC” button to cancel setting change and return to time display status.

2. If the alarm is on, the alarm icon  will be displayed. When the alarm activates, a Beeping sound will be heard and it will last for one minute. Press any key to stop the sound.

Mode Selection:

In time display status, press “MODE” key to change between different function modes. The cycle as following:

Spell Checking Mode → Data Bank Mode → Scheduler Mode → Calculator Mode → Euro Rate Conversion Mode → Normal Time Display Status

Spell Check Mode:

The Spell Check mode is used to check the spelling of more than 300,000 terms, including medical and pharmaceutical words.

1. In the time display status, press the "SPELL✓" button or press the "MODE" button once to enter the Spell Checking Mode.
2. Begin typing the word that you want to spell. To receive the most appropriate results for the correct spelling of that term, simply press the "Enter" button.
3. A "Check..." message will appear while the most appropriate suggestions are being located. After a few seconds, the suggestions will appear on the LCD display. Press the "↓" or "↑" buttons to scroll through the suggestion list. If you encounter a suggestion that is longer than the LCD display, simply press the "←" or "→" to scroll and view the entire term. To spell check another word; press the "ESC" button.
4. An auto-complete feature is also available for Spell Checking. Simply begin typing the term that is in question. As you type, the spell checker will try to auto-complete the term below. To view suggestions in the auto-complete feature, simply press the "↓" button and scroll through the list. If you would like to delete a letter, press the "←" button to remove.
5. The user has the option to spell check one of three ways: Phonetically, Typographically, or Both. The handheld unit is set to Both as the default. To select the type of spell checking, simply press the "SPELL✓" button until the desired option is highlighted.

Data Bank Mode:

The Data Bank mode is used for storing important contact information. Names, phone numbers, and e-mail addresses can all be stored in this mode.

1. In time display mode, press the "TELE" button or the "MODE" button two times to enter the Data Bank Mode.
2. To enter a new contact, begin typing the name. When finished typing the name press the "↓" button to input the contact's home telephone number, company telephone number, fax number, mobile phone number and email address respectively.
3. Press the "ENTER" button to save the record and return to the Data Bank Mode main screen. Press the "ESC" button to exit without saving.

4. While in Data Bank Mode main screen, press the “↓” or “↑” buttons to view your contacts. Press the “ENTER” button to view the details of particular contact. Press the “ESC” button to exit. Press the “EDIT” button to make changes to a contact.
5. Press the “DEL” button then press the “ENTER” button to delete a contact.

Scheduler Mode:

The Scheduler Mode is used for setting appointments, reminders, notices, etc.. When the time for the scheduled record is met, an alarm will sound.

1. In time display status, press the “SCH” button or the “Mode” button three times to enter Scheduler Mode.
2. Press the “EDIT” button to insert the new record. The Year will start to flash, press the “↓” or “↑” buttons to adjust, press the “←” or “→” buttons to select the option. (The selected option will be flashing)
3. Once the scheduled time has been entered, input the schedule message, and then press the “ENTER” button to save. (A total of five scheduled messages can be saved. When the schedule reminder goes off, the alarm will beep for one minute to notify you of the scheduled reminder) Press the “ESC” button to cancel.
4. In the Scheduler Mode main screen, press the “↓” or “↑” buttons to view the scheduled records, If a “←” or “→” icon appears on the right of the LCD display that means that the current phrase is too long for the LCD display. Use the “←” or “→” buttons to scroll through scheduled records that have phrases longer than the LCD display.
5. While viewing the scheduled message, press the “EDIT” button to make changes to the selected record.
6. To delete a record, press the “DEL” button and then press the “ENTER” button. Press the “ESC” button to exit.

Calculator Function:

Press the “CALC” or press the “MODE” button four times to enter Calculator Mode. Press the “CE” button to clear the input data. Press the “ESC” button to leave the Calculator Mode.

Euro Rate Conversion Mode:

The Euro Rate Conversion Mode displays the conversion rate from the Euro to different foreign currencies.

Euro Conversion:

1. Press the "EURO" button and then press the "↓" button to enter Euro Conversion Mode. Press the "↓" or "↑" buttons to locate a currency to convert to. Enter in the amount in Euros then press the "ENTER" button to convert the amount to the corresponding currency. Press the "←" or "→" buttons to change the conversion direction.

To Set Conversion Rate:

1. Press the "EURO" button to enter exchange rate conversion mode. The default exchange rate is 1:1. Press the "EDIT" button and then the desired rate to change the exchange rate. Press the "ENTER" button to save the setting or the "ESC" button to cancel. Now, enter the amount and press the "ENTER" button to convert the rate. Press the "←" or "→" buttons to change the conversion direction.

Keyboard Sound:

In the time display status, press the "SYMBOL" button to switch keyboard sound on or off.

Resetting Data:

The product will display "Reset Data?" if the unit's batteries are removed or replaced. Select "N" if you want to retain all saved data or select "Y" to delete all saved data.

Proper Use:

To ensure long life of the unit, please handle unit with care. Do not expose the unit to extreme conditions such as high and low temperatures, submersing in liquids, repetitive bumping or dropping, etc. These conditions can lead to loss of functionality or damage the unit permanently. These conditions may void warranty on product.

Specifications:

Dimensions: 8.1 x 11.9 x 1.2 cm

Weight: 2.7 oz

Battery: Lithium CR2032 x 1 piece

Automatic power off: Approx. 2 minutes

LCD Display: 14 characters x 2 lines

Spellex Corporation One (1) Year Limited Warranty (U.S. Only)

WARRANTY COVERAGE:

Spellex's warranty obligations are limited to the terms set forth below: Spellex Corporation ("Spellex") warrants this hardware product against defects in materials and workmanship for a period of ONE (1) YEAR from the date of original retail purchase. If a defect exists, at its option Spellex will (1) repair the product at no charge, using new or refurbished replacement parts, (2) exchange the product with a product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product, or (3) refund the purchase price of the product. A replacement product/part assumes the remaining warranty of the original product or ninety (90) days from the date of replacement or repair, whichever provides longer coverage for you.

OBTAINING WARRANTY SERVICE:

If you purchased the product in the U.S., upon discovering a defect, you must call Spellex Corporation at 800-442-9673 (813-792-7000) to request a Return Merchandise Authorization Number (RMA) before returning the product. The return of the product will be at the owner's expense. Return the defective product to:

Spellex Corporation
Attn: Returns Department
10820 Sheldon Road
Tampa, FL 33626

If you are returning a defective product, please be sure to include the original sales receipt and print the RMA number on the outside of the return shipping container. For more information about returning a product, please visit our web site at <http://www.Spellex.com/>.

EXCLUSIONS AND LIMITATIONS:

This limited warranty covers all defects encountered in normal use of the product, and does not apply to the following cases:

- (a) Loss or damage to the product due to abuse, mishandling, alteration, accident, electrical current fluctuations, failure to follow operating instructions, and maintenance prescribed in Spellex manual.
- (b) Use of parts (other than those distributed by Spellex) which damage the product or cause abnormally frequent service calls or service problems.
- (c) Loss or damage to the product due to leaking batteries or water damage.